




FT-ONE THERMAL FAN CONTROL

1. Remove the 100W PA Unit from the radio.
2. Remove the four screws from the 100W PA Unit, as shown in Figure 1.
3. Drill a 3mm (1/8 inch) diameter hole in the 100W PA Unit side cover, as shown in A of Figure 1 (Lot 1 and 2).
4. Apply thermal grease to thermal switch TS01, and install along with the diode (V06B) and the jumper wire, as shown in Figure 2 (3 x 8 screw, nut and spring washer provided).
5. Replace the four screws. Modification is now complete.

100 W PA UNIT

To Collector of Q04,05

To Collector of Q02,03

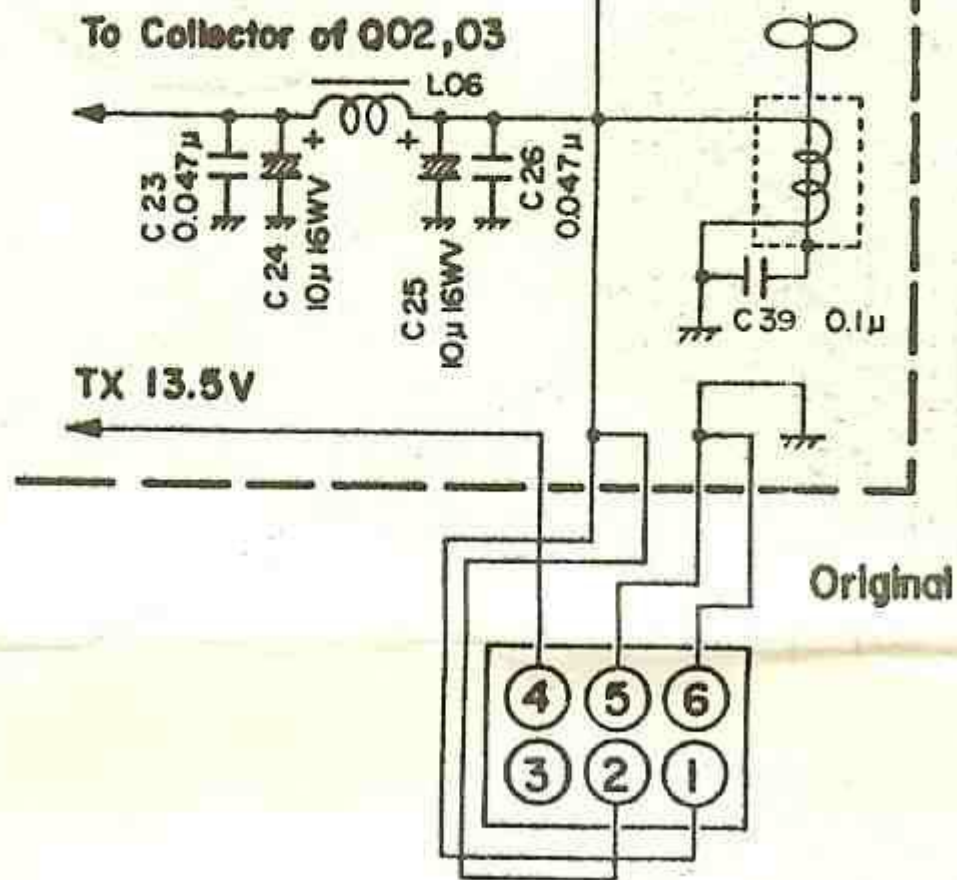

Original

100 W PA UNIT

To Collector of Q04,05

To Collector of Q02,03

